

**17L
4019**

Nissan Navara NP300 D23 KC/DC Md. 2015

Renault Alaskan Md. 2017

Mercedes X-Klasse Md. 2017

Styling bar 60


Styling-Bügel 60

Arceau 60



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

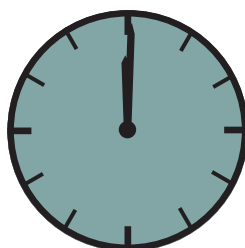

60 Minuten




Artikel-Nr:

17L4019

17L5019 black steel


Revision 5: 18.10.2018



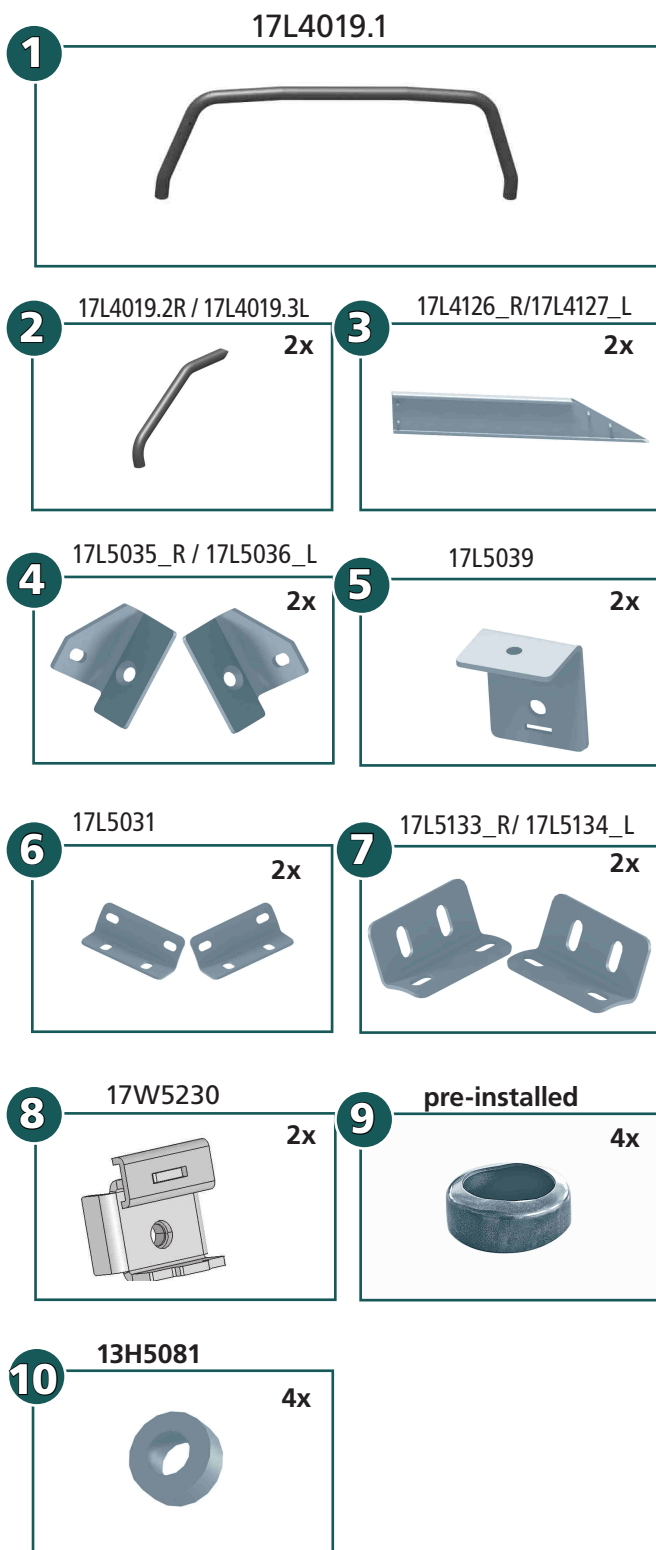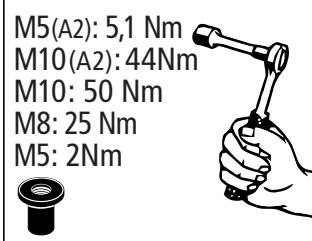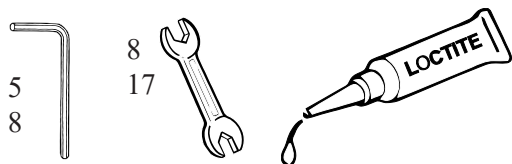


a		M10x30; DIN 912 A2	2x
b		M5x20; DIN 933 A2	8x
c		M10x40; DIN 933 Zn	2x
d		M8x30; DIN 7991 A2	4x
e		M5; DIN 985 A2	8x
f		ø5,3; DIN 125 A2	16x
g		ø10,5; DIN 125 Zn	2x
h		Getowell M5	8x
i		SW8	16x
j		SW17	2x
k		M8x25; DIN 933 Zn	2x
l		Ø 8,4; DIN 9021 Zn	2x
m		SW 13	2x
n		Gummi Stopfen Art.Nr. 0561 116	2x


Step 1

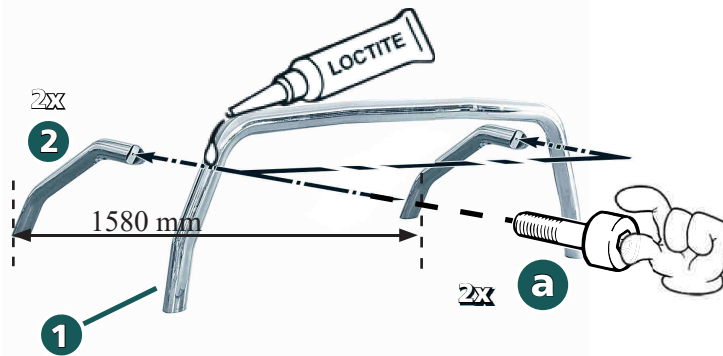


Step 2

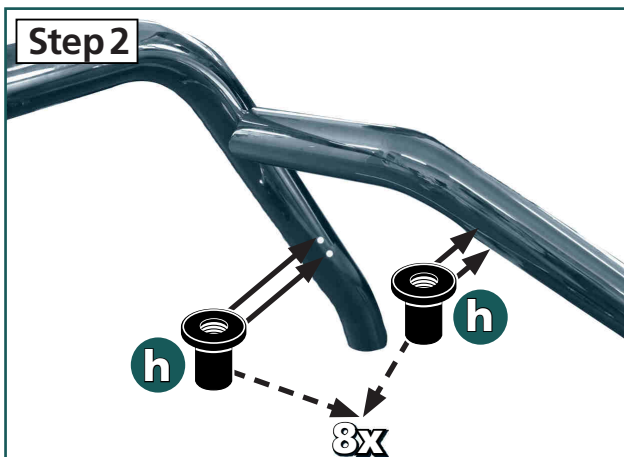


Step 3

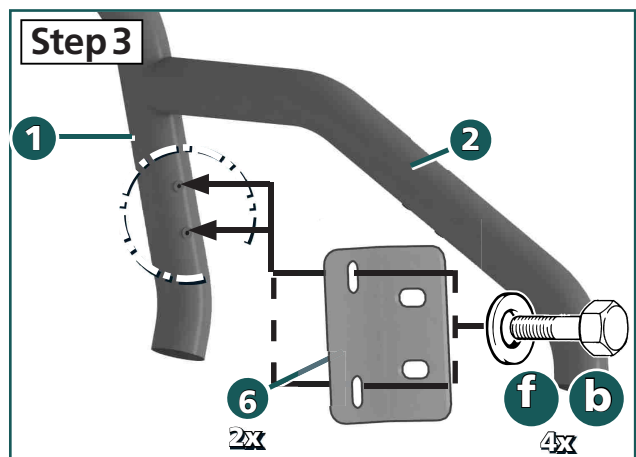


Step 4

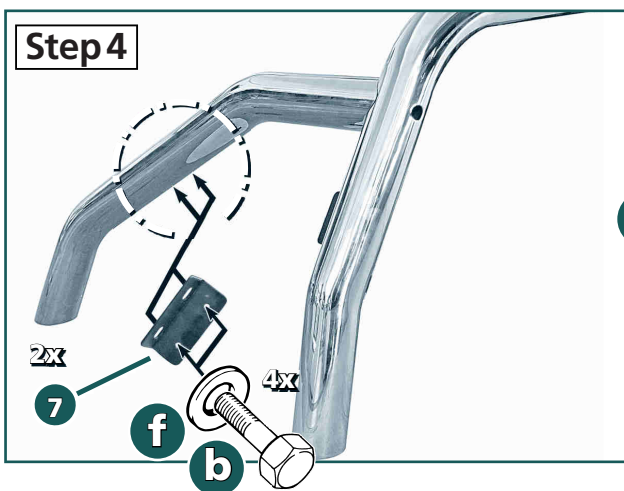


Step 5

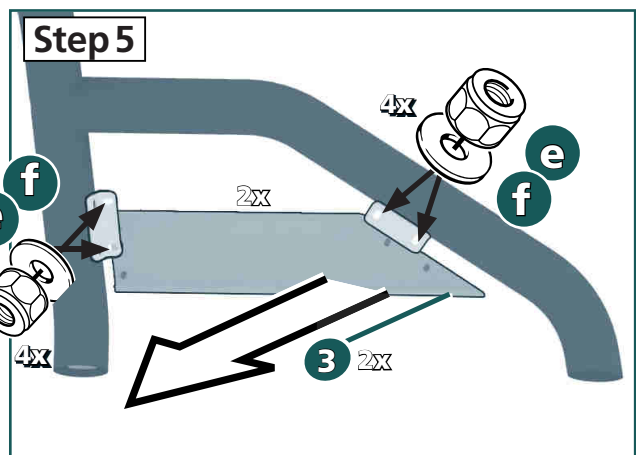


Step 6

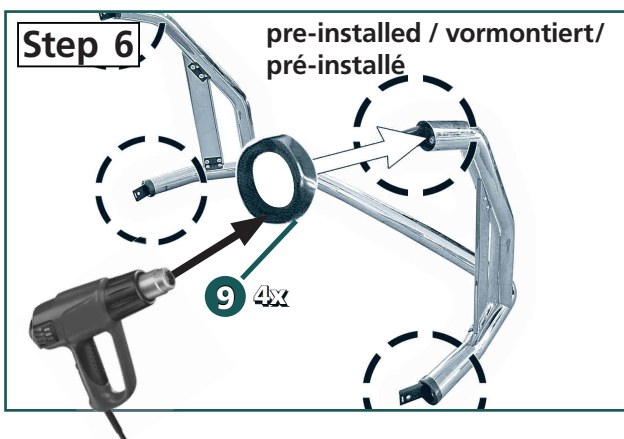


Step 7

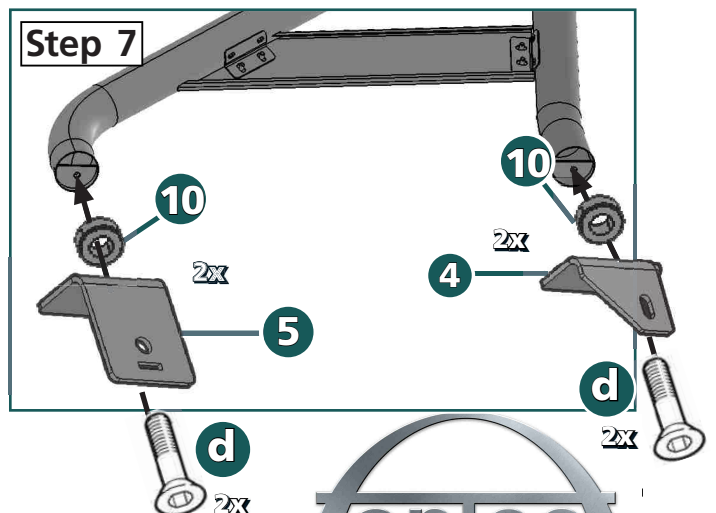


Step 8

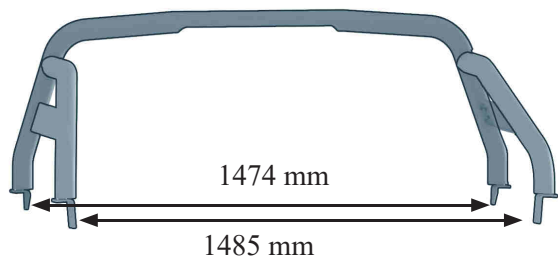


Step 9

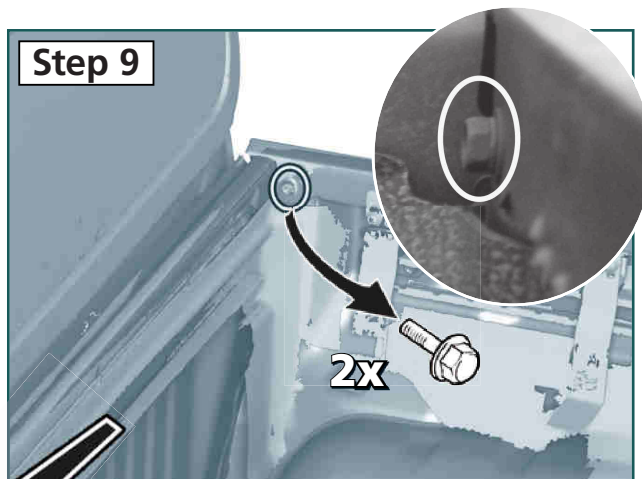


Step 10

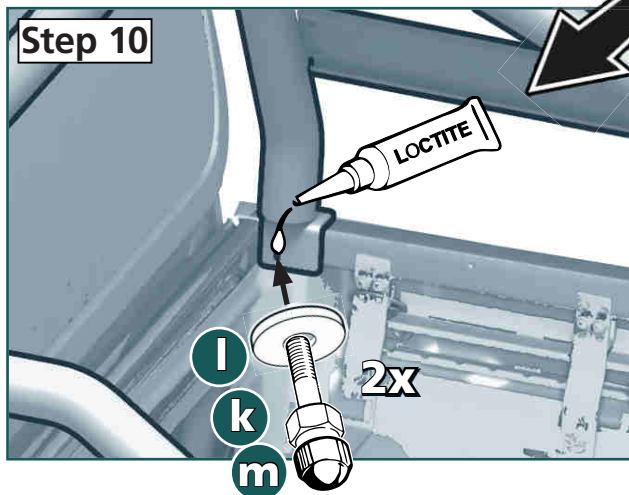


Step 11

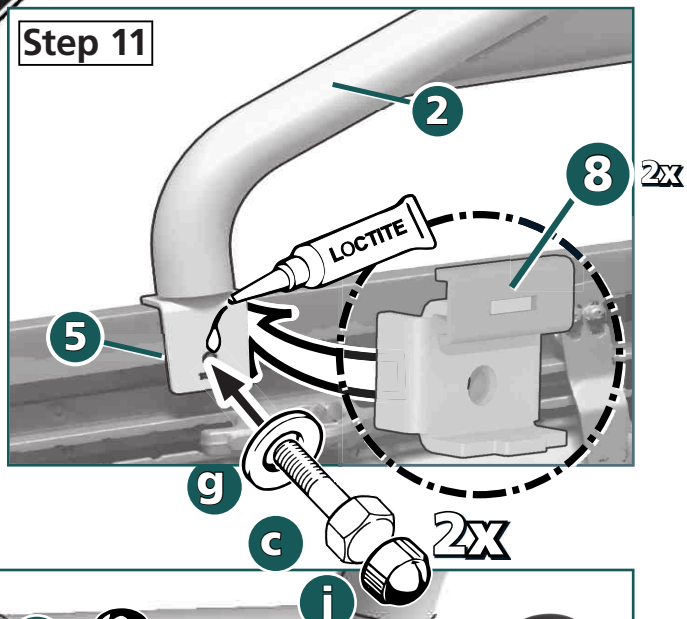

Step 12

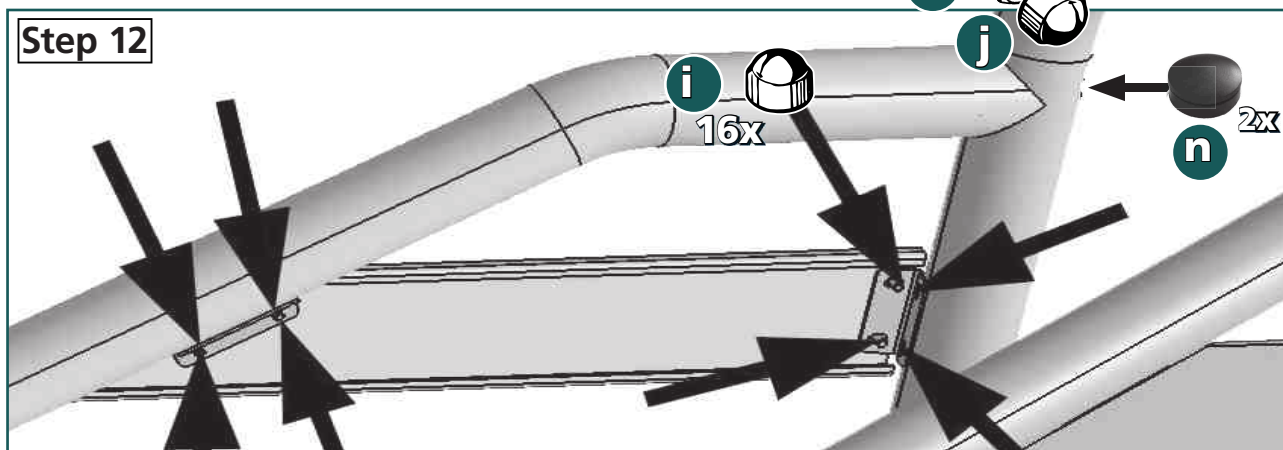

Step 13

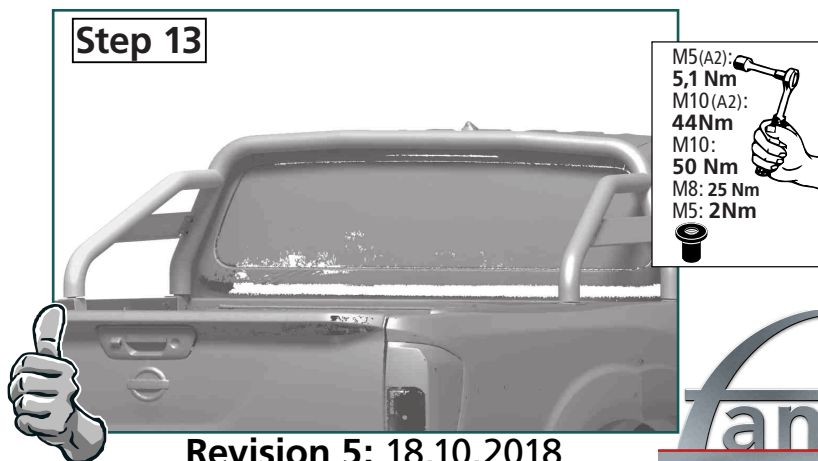

Revision 5: 18.10.2018

